



### Actuator Only Part Numbers

Individual Premium Electric actuators can be ordered for specific Spears® valve types and sizes. Includes actuator and mounting hardware for specified valve type and size. To specify valve type for actuator only, enter the first digit valve type code followed by zeros ("0") for remaining 4-digits of the valve code section of the part number plus the applicable 3-digit valve size code (see valve selection Tables 1, 2, or 3). Complete the actuator code selection as described in this section. See Step 3 for any desired actuator accessories.

**Example:** A 115 VAC electric actuator only with NEMA 4 enclosure, basic manual override and 75% duty cycle for 2" standard True Union Ball Valve would have the following part number: 10000A112-020.

### Optional Control Numbers (custom use) - Electric Actuators

5 = Oversize Housing

8 = AUMA SA07.1-26B Actuator

H = AUMA SA07.5-38A 115 VAC Single Phase Actuator, (2) Gear Train Limit Switches, Open / Close Torque Switches, Space Heater, Plug & Socket type terminals, Side Mounted hand wheel, Nema 4x enclosure, Reversing starters, Power Supply board, Interface Board - 110 VAC, 3 Push buttons O/S/C, Selector Switch L/O/R, 3 Lights open / fault / close

9 = Actuator Upsize (one size to accommodate accessories)

K = Custom 2-position Actuator on 3-Way Ball Valve

X = Actuator assembled with Double Containment Valve & Valve Box (for use in "actuator only" part number)

**Note:** When control number is used on a package with accessories, the dash ( - ) is dropped before the "A" due to part number limitations.